



Excalibur

EXCALIBUR POWER

S20

SPARE PARTS FOR S20 ENGINE



箱体	箱盖	缸头	曲轴	正时齿轮	平键
cylinder body	cylinder cover	cylinder head	crankshaft	timing gear	key
飞轮螺母	连杆	活塞	活塞环(套)	活塞销	活塞销卡簧
nut	connecting rod	piston	piston ring set	piston pin	piston pin clip
凸轮轴	调速齿轮轴	调速轴	调速齿轮总成	挺杆	化油器
camshaft	governor gear shaft	governor arm shaft	governor gear set	tappet	carburetor
汽油管	绝缘体	调速杆组件	杆弹簧	调速弹簧	调速器拉杆
gasoline pipe	insulator	governor lever cp	rod spring	governor spring	governor rod
进气门	排气门	气门弹簧	气门弹簧座	气门导管	调速手柄
intake valve	exhaust valve	spring retainer	valve retainer	valve pipe	speed control cp

 
 
JIANGSU EXCALIBUR POWER MACHINERY CO., LTD.

呼吸器部件 	呼吸器盖 	弹簧垫片 	压片 	油箱 	滤网 	
breather component	breather cover	spring washer	stop plate cp	fuel tank	fuel filter	
油箱盖 	燃油开关组合 	油尺 	飞轮 	导风罩 	启动轮 	
fuel tank cap	fuel strainer AY	oil gauge	flywheel	blower housing cp	starter pulley	
启动器总成 	手柄 	拉绳 	半圆键 	火花塞 	法兰螺栓 	
recoil starter assy	knob	starter rope	woodruff key	spark plug	Flange bolt	
空滤-1 	滤芯-1 	空滤-2 	滤芯-2 	消音器 	消音罩 	
air cleaner-1	element-1	air cleaner-2	element-2	muffler	muffler cover	
点火线圈 	点火开关 	密封件(七件套) 	上盖板 	线卡 	折流板 	
ignition coil cp	on&off switch	gasket(7sets)	head cover	wire bracket	cylinder baffle	
抱箍 	飞油刀 	气门油封 	调速轴油封 	曲轴后油封 	曲轴前油封 	调速轴卡簧 
clip	oil scraper	oil seal of valve	oil seal governor arm shaft	crankshaft rear oil seal	crankshaft front oil seal	governor arm shaft clip
定位销 	放油螺塞 	橡胶管 	回位弹簧 	进气门气门座圈 	排气门气门座圈 	
dowel pin	plug	rubber pipe	return spring	intake valve seat	exhaust valve seat	

JIANGSU EXCALIBUR POWER MACHINERY CO., LTD.





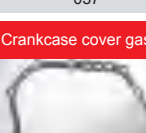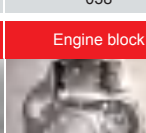






DIESEL ENGINE SPARE PARTS

Element for 170F, 178F  001	Element for 186F  002	Fork lever assembly  003	Pad  004	Oil drain plug  005	Oil drain plug gasket  006	Flywheel  007
High pressure fuel pipe  008	Return spring  009	Piston  010	Piston ring  011	Piston pin  012	Retainer clip of piston pin  013	Oil pump  014
Oil dipstick  015	Oil filter cleaning element  016	Exhaust Intake Valve  017	Air cleaner  018	Recoil starter  019	Connecting rod AY  020	Connecting rod journal bearing  021
Fuel filter  022	Sealed ring  023	Injector Pump  024	Fuel injector gasket  025	Fuel injector pressure plate  026	Balancing shaft  027	Cylinder head gasket  028
Valve springs  029	Valve spring washer  030	Valve clearance adjusting screw  031	Valve spring seat  032	Valve Seal  033	Cylinder head cover  034	Cylinder head  035
Cylinder head screw gasket  036	Crankshaft  037	Governor gear  038	Speed opeartor  039	Tappet  040	Camshaft  041	Push rod  042
Crankcase cover  043	Crankcase cover gasket  044	Engine block  045	Muffler  046	Rocker arm  047	Fuel tank cock  048	Fuel controller parts  049
Fuel tank  050	Fuel filter  051	Lower fuel tank bracket  052	Fuel Injector  053	Gasket set  054	Bearing  055	Main bushing  056

JIANGSU EXCALIBUR POWER MACHINERY CO., LTD.



TAMPING RAMMER SPARE PARTS

75 Gearbox	80 Gearbox	6305 bearing	Air Filter	Bottom Plate	Clamp
					
001	002	003	004	005	006
Clutch	Connecting Rod	Filter Element	Filter Element	Fuel Tank	Gasket for Rammer
					
007	008	009	010	011	012
Handle Shock Absorb Rubber	Hose from Filter to Carbureto	Rammer Bellow	Speed Control Cable	Spring for Rammer	Handle Knob
					
013	014	015	016	017	018
Speed Governor	Oil Cylinder	Rammer Cover			
					
019	020	021			

















 




 
POWER TROWEL SPARE PARTS

Belt Cover	Belt	BLADE ST30B ST36B ST120	Blade	Cable	Clutch
					
001	002	003	004	005	006
Cross Shaft	Gearbox	Gearbox	Gear	Handle	PAN
					
007	008	009	010	011	012

JIANGSU EXCALIBUR POWER MACHINERY CO., LTD.

 
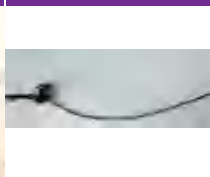 


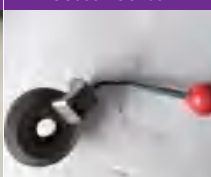


PLATE COMPACTOR SPARE PARTS

16008 Bearing	Belt Cover SC77W	Belt	Bottom Plate Shock Absorb Rubber	Cable SC160B SC330B	Clutch for Diesel Plate Compactor
					
001	002	003	004	005	006
Ecc. rotary Shaft, drive	Ecc. rotary shaft, driven	Handle Pin SC160B SC330B	Pulley and Clutch SC90	Reversible Handle SC160B SC330B	Rubber Block SC60
					
007	008	009	010	011	012
Shock Absorb Rubber SC60	Shock Absorb Rubber SC100	Shock Absorber Rubber SC77W	Shock Absorber Rubber SC90	Speed Control throttle cable	Throttle Cable SC330B
					
013	014	015	016	017	018
Vibrator Assy SC100	Vibrator Housing SC90	Water Tank	Throttle Governor SC330B SC160B		
					
019	020	021	022		

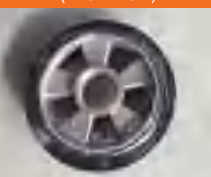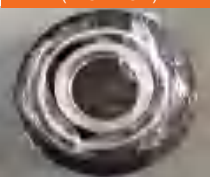

CONCRETE CUTTER SPARE PARTS

Concrete Cutter big wheel (ALUMINUM)	concrete cutter small wheel (ALUMINUM)	400mm Cutter Blade	500mm cutter blade	BLADE SHAFT ASSY	Bearing seat
					
001	002	003	004	005	006














GENERATOR SPARE PARTS

4 Inch Wheel	9 Inch Wheel	190 Alternator	204 Alternator	AVR	Battery
					
001	002	003	004	005	006
Carbon brush	Corrugated Pipe	Electro magnet	Flywheel Generator	Fuel tank	Funnel
					
007	008	009	010	011	012
Fuse	Motor Front Cover	Panel	Rectifier	Regulator	Rotor Assy
					
013	014	015	016	017	018
Shock Absorber Block	Starter Assy	Voltmeter			
					
019	020	021			



PUMP SPARE PARTS

Barb Connector	Discharge Elbow	Flange	Flow Guidance Plate	Impeller	Mechanical Seal
					
001	002	003	004	005	006
O-ring Gasket	Pump body	Pump Frame- Big Fuel Tank Frame, Small Fuel Tank Frame	Seal Sets	Whole Pumpset	
					
007	008	009	010	011	